


Correa maquina de coser 312628-00

312628-00



Correa maquina de coser 312628-00

Caractéristique	Valeur
Marca	Singer
Modelo	342
Modelo	343
Modelo	345
Modelo	4234
Modelo	4552
Modelo	4610
Modelo	4613
Modelo	4617
Modelo	4623
Modelo	5910
Modelo	6231
Modelo	6233
Modelo	6234
Modelo	6235
Modelo	6269
Modelo	7028
Modelo	9005
Modelo	9008
Modelo	9010
Modelo	9012N606
Modelo	9022

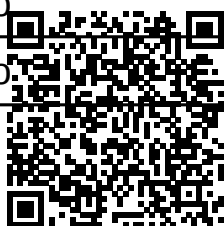

Modelo	9028
Modelo	9042
Modelo	9110
Modelo	9113
Modelo	9117
Modelo	9124
Modelo	9130
Modelo	9210
Modelo	9217
Modelo	9224
Modelo	9240
Modelo	9420
Modelo	9423
Modelo	9432
Modelo	9900
Utilización	Máquina de coser
Marca de la correa	Genérica
Unidad de venta	pieza

